

FAMILY

inada chair W.1

*World's first
massage chair
that synchronizes
music and sound
generated from a
home theater unit
with massage*



Black



Brown



Grey

Movable Arm Rest

The INADA Chair W.1 features fully movable arm rests on both sides. With the arm rest in the upright position, you can slide in or out of the chair from either side easily.



Flat Foot Rest

First massage chair with fully retractable foot rest. At its default position, the foot rest has smooth flat silhouette. Once it is activated, side panels flip up to cradle legs and perform Multi-Point-Shiatsu-Massage.



Easy-to-use Remote Control



The INADA Chair W.1 is the world's first massage chair to synchronize music and sound generated from a home theater unit (DVD, TV, VHS, CD, etc.) with massage. It will take your home theater experience to the next level by synchronizing your audio-visual experience with a dynamic custom massage.


Healthcare Programs:

1. Fullbody Relief: Relaxes the muscles that affect your whole body and alleviates fatigue by stimulating shiatsu points.
2. Stiff Shoulders: Helps to relieve tension and stiffness around the neck and shoulders.
3. Neck Focus: Helps to relieve tension and stiffness on the neck area.
4. Lower Back Tension: Recommended for lower back muscle pain and fatigue.
5. Seat: Combination of vibration and air massage directly stimulates the muscles of the seat area.
6. Shiatsu: Slow motion shiatsu massage for entire body.
7. Morning: Uses a European massage technique moving from the extremities inward, toward the body's center. Recommended massage for first thing in the morning.
8. Night Time: Uses a Chinese massage technique moving outward, from the center of the body toward the extremities. Recommended for use before bed.

The INADA chair W.1 comes with a Synchronizer package, including an Amplifier Unit and a Speaker Head Rest, which connects a W.1 chair with your home theater unit. Your massage will be keyed to the music and sounds in the bass range, tapping and back vibration for the treble range, and leg vibration for the mid-range. You can adjust the bass and treble levels using "UP" and "DOWN" buttons. The program can sense variations in rhythm and melody as well as volume, so you can enjoy as much variation in your massage as you do in your home theater collection. You can also adjust the sensitivity of the massage synchronization to the audio. The program enhances the sensory experience of your massage for deeper mental relaxation.



Synchronizer

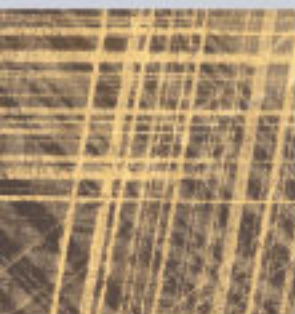


Name and Model	Synchronizer SYN-012A
Power Supply	AC 120V
Power Consumption	15W
Auto Timer	Approx. 15 minutes (Synchronized Massage Program)
Dimensions	Approx. W10" x H29.6" x D12.4"
Weight	Approx. 16.3 lbs.
Accessories	Audio Cable, Mini Plug Cable, Synchronizer Cable

Speaker Head Rest

Color: Black, Grey, Ivory, Brown



Dimensions

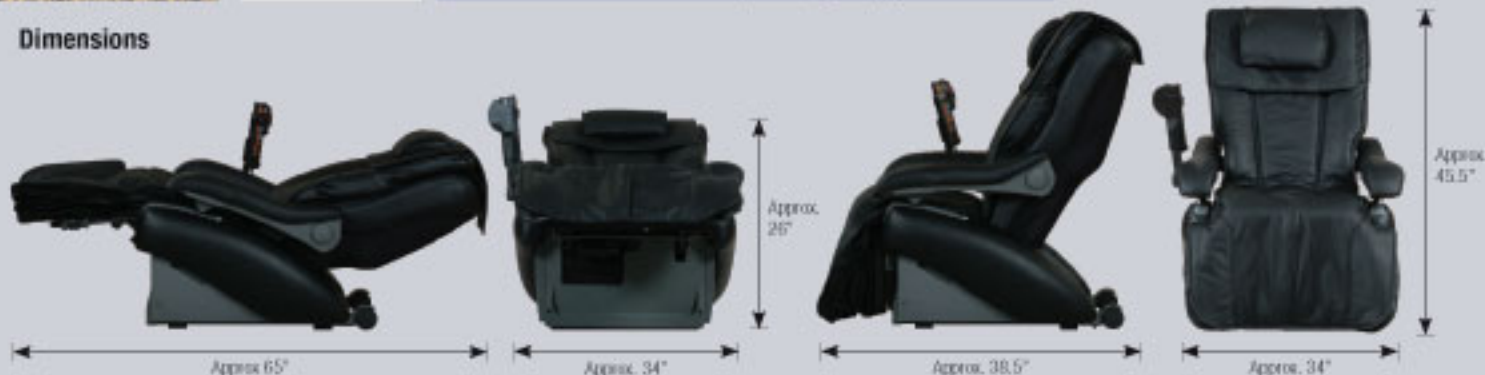

Main Specifications

Name and Model	INADA CHAIR W.1 HCP-W1A
Power Supply	AC120V
Power Consumption	185W
Auto Timer	Approx. 15 minutes (Healthcare Programs vary in duration)
Dimensions	Upright: Approx. W34" x H45.5" x D38.5" Full recline: Approx. W34" x H26" x D65"
Weight	Approx. 165 lbs.
Reclining Angle	Approx. 120° - 170° (continuous adjustment)
Outer Covering	Genuine leather - Synthetic leather
Accessories	Remote Control Stand, Power Code

⚠ Safety Precautions

- Before using your chair, read the Operating Manual carefully to ensure safe, proper use of the chair.
- The following persons must not use this massage chair:
 - Persons with serious circulatory problems such as varicose veins, thrombosis, etc.
 - Persons who have been advised by their doctor not to use the chair.
 - Persons with any of the following conditions must seek medical advice before using the chair:
 - Joint dysfunction such as rheumatism and gout
 - Persons planning to use the chair to treat a specific ailment or parts of their body that have undergone therapy
 - Persons under bedrest orders
 - High fever
 - Pregnancy or suspected pregnancy
 - Certain skin condition
 - Sensory impairment
 - Persons with pacemakers or other electronic medical devices
 - Certain osteoporosis
 - Acute gastro-intestinal complaints (gastritis, hepatitis, etcetera)
 - Certain heart problems
 - Persons under a doctor's care, or those experiencing unusual physical discomfort
 - Abnormal tumor
 - Persons with spinal abnormalities due to past injury or ailment, persons with curvature of the spine
 - Certain diabetes
 - Children, persons who are unable to communicate, and persons who are physically challenged should not be allowed to use the chair. Do not allow children or pets to play near the chair. Especially behind the reclining seat back or under the seat or foot rest, climb on the chair or sit in the chair. Failure to do so could result in injury or accident.

⚠ When using the chair:

A warranty card is provided with each chair at purchase. Please read the contents carefully and keep the card in a safe place. You will need it to facilitate warranty repairs. The chair is under warranty for three years. • Colors may vary slightly from printed material. • Contents may vary from those specifications. • Specifications subject to change without notice as a result of product improvements.